


Parts Diagram

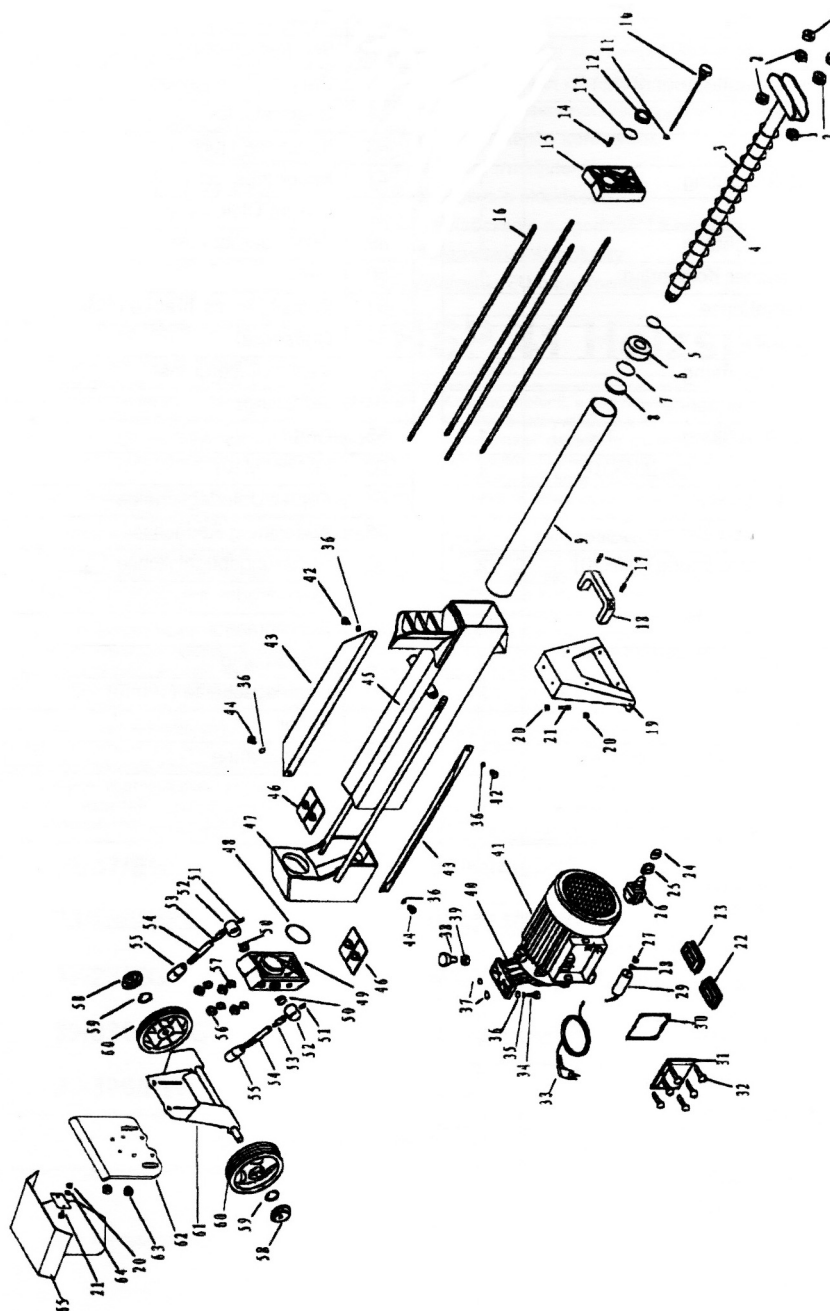

Model XM-380 Log Splitter Parts List

No	Name	Qty
1	Hexagonal nut (M14)	2
2	Hexagonal nut thin (M14)	4
3	Hammer ram	1
4	Spring	1
5	O-ring fluid seal	1
6	Piston	1
7	O-ring fluid seal	1
8	Square piston ring	1
9	Fluid cylinder casing	1
10	Dip stick	1
11	O-ring fluid seal	1
12	Teflon seal ring	1
13	O-ring fluid seal	1
14	Bleed screw (M3x10)	1
15	Fluid cylinder cover	1
16	Screw stud	2
17	Philips screw (M6x20)	2
18	Carrying handle	1
19	Supporting foot	1
20	Nut (M6)	4
21	Screw (M6x14)	2
22/23	Rubber supporter for electrical motor	1
24	Switch dust shield	1
25	Switch	1
26	Switch seat	1
27	Nut (M8)	1
28	Fixing washer	1
29	Capacitor	1
30	Dustproof rubber sealing ring	1
31	Capacitor casing	1
32	Philips screw	8
33	Cord and plug	1
34	Screw (M8x30)	3

No	Name	Qty
35	Ring spring (8 mm)	9
36	Washer (8 mm)	13
37	O-ring fluid seal	2
38	Screw (8 mm)	1
39	Nut (M8)	1
40	Fluid pump cover	1
41	Electrical motor assembly	1
42/44	Screw (M8x30)	4
43	Log guiding plate	2
45	Main Body	1
46	Plastic sheath plate	2
47	Log pusher assembly	1
48	O-ring fluid seal	1
49	Fluid cylinder cover - front	1
50	Spring	1
51	Fixing screw (M8x30)	1
52	Handle seat	1
53	Valve knob	1
54	Handle bar	1
55	Handle	1
56	Nut M8	2
57	Brass shim	4
58	Wheel axle cover	2
59	Shaft fixation hook	2
60	Rubber wheel	2
61	Wheel frame	1
62	Support plate	1
63	Washer (10 mm)	2
64	Spring	1
65	Protection hood	1